

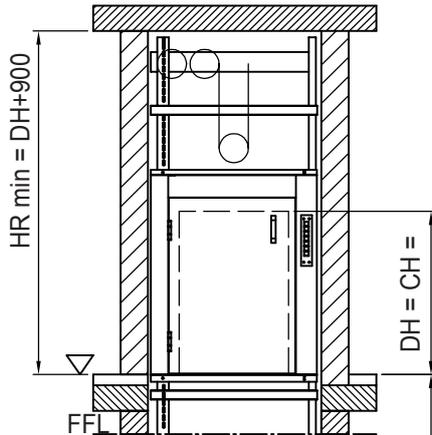


**Well dimensions are absolute min. plumbed dimensions**

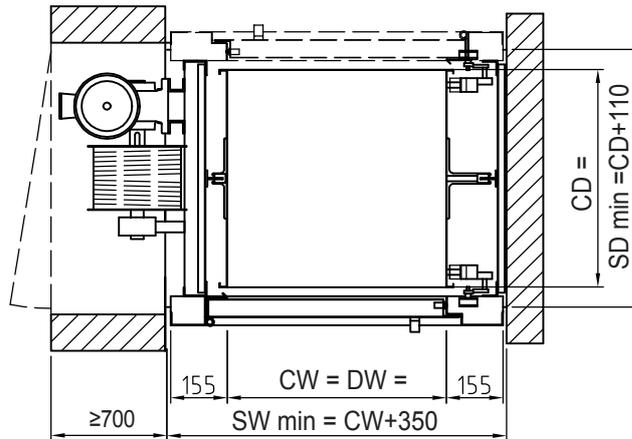

All doors drawn left hinged  
Doors right hinged mirror-image

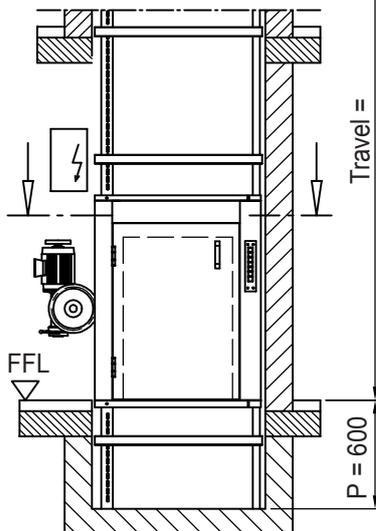

**ATTENTION:**  
Machine room door by others  
Position of machine room  
(left or right) to be advised with reference  
to the lower landing door !

**ATTENTION:**

Cabin protection  
reduces clear  
entrance openings  
resp. shaft sizes  
(see part 10)

**Accessible rooms underneath shaft inadmissible**

Cabin width and -depth available in increments of 50 mm  
Cabin height available in increments of 100 mm

CW	=	cabin width	<b>min. 600 - max. 1000 mm</b>
CD	=	cabin depth	<b>min. 700 - max. 1000 mm</b>
CH	=	cabin height	<b>min. 800 - max. 1200 mm</b>
DW	=	door width	= Cabin width
DH	=	door height	= Cabin height
P	=	pit	= min. 600 mm
SW	=	Shaft width	= plumbed min. dimensions
SD	=	Shaft depth	= plumbed min. dimensions
HR	=	Headroom	= clear height of top floor FFL - underside ceiling
FFL	=	finished floor level	



**Prices and specification see back side**